


**SIRCHIE**

FINGER PRINT LABORATORIES  
Website: www.sirchie.com  
E-mail: sirchieinfo@sirchie.com

100 HUNTER PLACE  
YOUNGSVILLE, NC 27596 USA  
Phone: (919) 554-2244, (800) 356-7311  
Fax: (919) 554-2266, (800) 899-8181

**TECHNICAL INFORMATION**  
**Footprint Residue Lifters**  
**Catalog No. FR001, FR001BL, FR001WH**

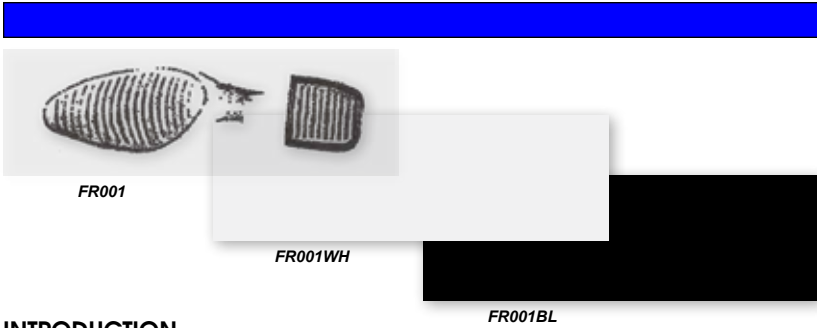

**INTRODUCTION**

A very highly fragile form of physical evidence is dust prints found at the crime scene. Special lighting techniques are needed to photograph these prints—and preserving the evidence once it is photographed is vital. The FR001 Series of Footprint Residue Lifters were specifically designed for recovering impressions left in dust, dirt or powdered materials found on hard surfaces. Their super-sensitive acrylic adhesive permits lifting the most minute particles.

**PROCEDURE**

To lift an impression left in dust, dirt or powdered material on a hard surface, simply remove the adhesive protector starting at the score along the length of the lifter (see illustration below). Apply the lifter to the area containing the evidence with slow, even pressure—be certain not to trap any air under the lifter. After application, lift the lifter from the surface with a slow, steady motion and mount on the backing material supplied with each lifter. Again, avoid air bubbles.

Lifters are 6" x 15" (15.2cm x 38.1cm) and are supplied in a package of 12. Lifters are supplied with twelve 6" x 15" transparent, black or white plastic backing sheets 10 mil (.010") thick.

**Reorder Information**

- No. FR001 ..... 6" x 15" Footprint Residue Lifters w/Transparent Backing, 12 ea.
- No. FR001BL..... 6" x 15" Footprint Residue Lifters w/Black Backing, 12 ea.
- No. FR001WH ..... 6" x 15" Footprint Residue Lifters w/White Backing, 12 ea.

