

---

## TECHNICAL INFORMATION

### Evidence Collection Lifter

#### Catalog No. ECL100

---

#### INTRODUCTION

The ECL100 Evidence Collection Lifter is designed for use at the crime scene when it becomes necessary to collect microscopic particle evidence. Each lifter is coated with a clear acrylic adhesive which is protected by a Mylar™ sheet. The lifter material size is 6" x 15" x 0.005" (thick).


Evidence collection lifters may be used throughout the crime scene to collect evidence such as dust and dirt particles, fibers, hairs and stains.

Each lifter is supplied with a white vinyl backing sheet (6" x 15" x .010" thick).

#### PROCEDURE

To use the ECL100 Evidence Collection Lifter, remove the protective cover by peeling it at the score along its length (see illustration on back page).



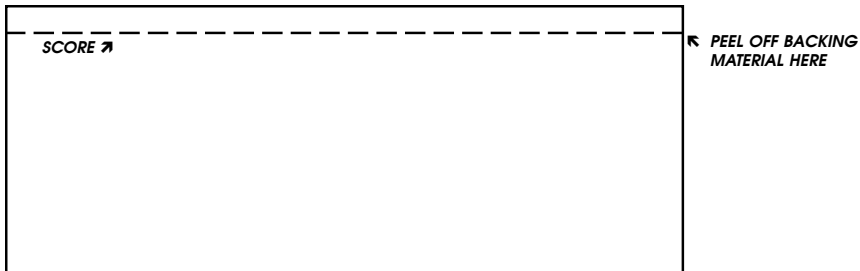

Apply one end of the lifter to the surface and slowly, but firmly, press it to the surface. Once in place, rub the lifter to force out any air bubbles that may have formed. Slowly lift one corner of the lifter from the surface, peeling it from one end to the other.

Once the lifter is removed from the surface, apply it to the white vinyl backing sheet. With the backing sheet now affixed to the adhesive side of the lifter, any particles of evidence on the surface are protected and may easily be examined.

REORDER No. ECL100..... Pkg. of 12 Lifters and White Vinyl Backing Sheets